

Quick Installation Card

Faro arm + MMD

August 2009



METRIS

Reliable and Innovative Metrology Solutions

Faro arm localizer

- Install the FaroArm USB Driver (FaroArmUSBDriver5.exe) with the Faro arm disconnected.
- Set the IP address of the Ethernet network interface that is used for the MMD to 192.168.1.xx, subnet mask 255.255.255.0.
Note:
The address range 192.168.1.70 to 192.168.1.79 is used by scanners, so do not use this for the network here above.
- Connect and setup all hardware components of the Faro system.
- Wait until the Windows “Found new hardware wizard” dialog pops up. Then select ‘No, not this time’ and ‘Install the software automatically’ for the first two steps of this wizard.
- Reference all encoders of the Faro arm by rotating each joint.

Scanning API

Install the Hand-Held API runtime (HandheldApiRuntime_v3.3.msi).

Note:

This may already be part of the installation package of the host application.

Calibrations on first use

- If the arm has been transported, allow it to adjust to the temperature of the room for a few hours.
- Before scanning with the MMD scanner, a qualification must be established. To start the qualification procedure, open the settings dialog provided by the Metris Hand-Held API (through the host application) and click the button [Start Qualification] on the [Qualification] tab page. Follow the instructions on the screen.